## MAINTENANCE SCHEDULE

Perform the Pre-ride inspection in the Owner's Manual at each scheduled maintenance period.

I: Inspect and Clean, Adjust, Lubricate or Replace if necessary. C: Clean. R: Replace. A: Adjust. L: Lubricate.

The following items require some mechanical knowledge. Certain items (particularly those marked \* and \*\*) may require more technical information and tools. Consult an authorized Honda dealer.

		FREQUENCY	NOTE	ODOMETER READING (NOTE 1)								REFER
			П	X1,000 mi	0.6	4	8	12	16	20	24	TO PAGE
TEMS			47	X1,000 km	1	6.4	12.8	19.2	25.6	32.0	38.4	
EMISSION RELATED ITEMS	*	FUEL LINE					1		1		- 1	3-5
	*	THROTTLE OPERATION					1		1		1	3-6
		AIR CLEANER	NOTE2					R			R	3-7
		SPARK PLUG					1		R		1	3-7
	*	VALVE CLEARANCE							1			3-9
		ENGINE OIL			R		R		R		R	3-13
		ENGINE OIL FILTER	' 03 - '05		R		R		R		R	3-14
		NEW	After '05		L = 600 mi (1,000 km) or 1 month : R LAR = Every 8,000 mi (12,800 km) or onths : R							
	*	ENGINE IDLE SPEED			- 1	1	1	1	1	1	1	3-15
		RADIATOR COOLANT	NOTE3				1		. 1		R	3-16
	*	COOLING SYSTEM					1		- 1		1	3-16
	*	SECONDARY AIR SUPPLY SYSTEM					-		- 1		1	3-17
	*	EVAPORATIVE EMISSION CONTROL SYSTEM						ı			1	3-17
NON-EMISSION RELATED ITEMS		FINAL DRIVE OIL					1		1		R	3-18
		BRAKE FLUID	NOTE3			- 1	1	R	1	1	R	3-19
		BRAKE PAD WEAR				-1	1	- 1	1	1	1	3-20
		BRAKE SYSTEM			1		1		1		1	3-21
	*	BRAKE LIGHT SWITCH					1		1		1	3-22
	*	HEADLIGHT AIM					- 1	3	1		1	3-23
		CLUTCH SYSTEM					-		1		1	3-23
		CLUTCH FLUID	NOTE 3			1	1	R	1	1	R	: 3-23
		SIDE STAND					1		1		1	3-24
	*	SUSPENSION					1		1		1	3-24
	*	NUTS, BOLTS, FASTENERS			-		1		1		1	3-26
	**	WHEELS/TIRES					. 1		1		1	3-26
	**	STEERING HEAD BEARINGS			1	1	1		1		1	3-27

\* Should be serviced by an authorized Honda dealer, unless the owner has proper tools and service data and is mechanically qualified.

\*\* In the interest of safety, we recommended these items be serviced only by an authorized Honda dealer.

## NOTES:

- 1. At higher odometer readings, repeat at the frequency interval established here.
- 2. Service more frequently if the motorcycle is ridden in unusually wet or dusty areas.
- 3. Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.